

Setup Process



Open the Box



Installer will examine the lawn and decide on the best wire layout.

Installer will point out any complications or areas unsuitable for the Robot.

 
 
 
 
 
Lawn Type?

Base Station Location



Power Box Location next to Power socket

Objects inside lawn

Slopes

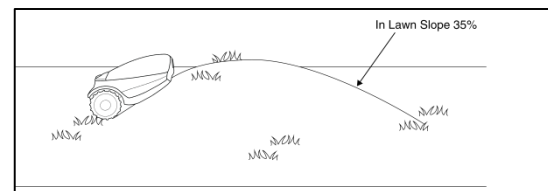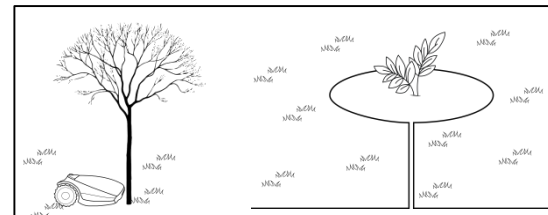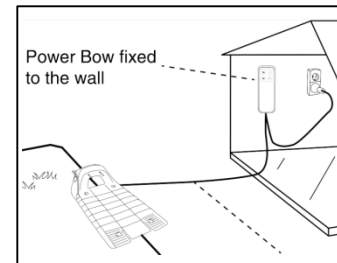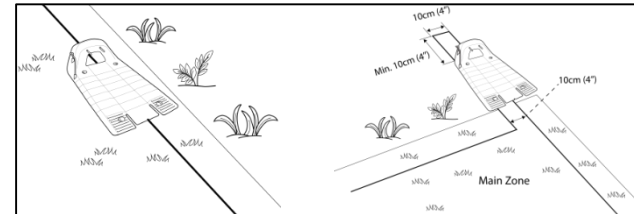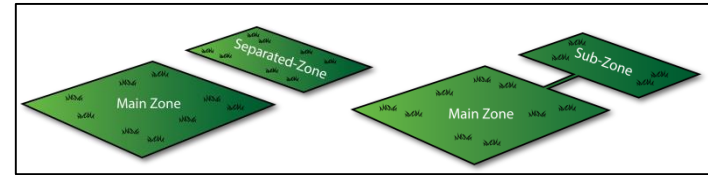

Setup Process (cont.)

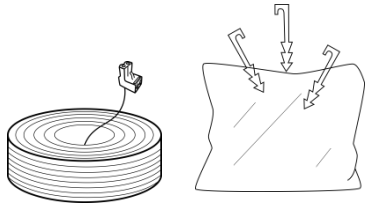  

Perimeter Wire Setup

 
 
 
 
 
 
 
 
 
 
Laying the
Perimeter Wire

Special wire
layouts

Terminate wire loop
connect base station

Enter Settings
Into Robot

Testing the
Setup, fill in
additional Pegs

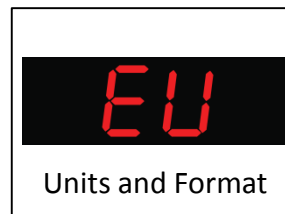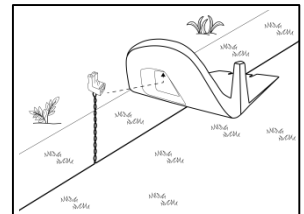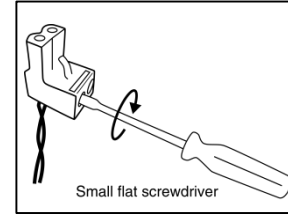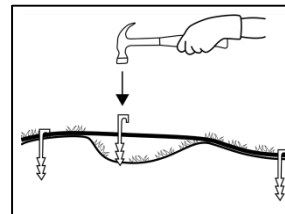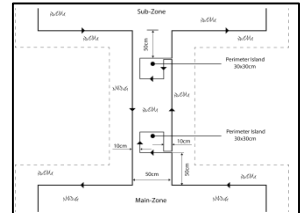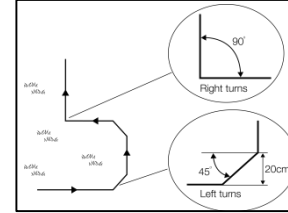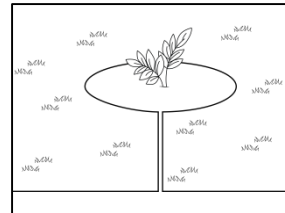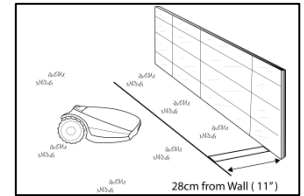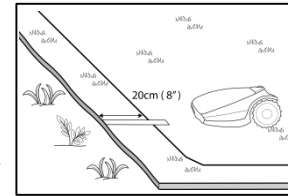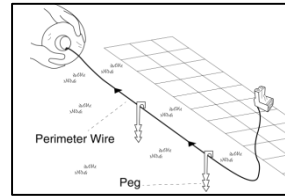




Units and Format



Day and Time



   Area

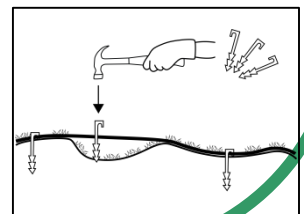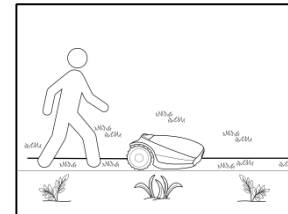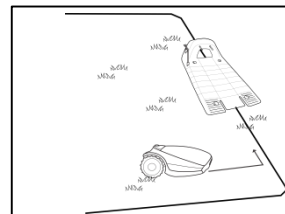

Setup with Robomow App

Customers will be lead step by step on how to use the application



N.B If the customer provides a compatible device at time of installation, the installer will carry out
The pairing of devices and show them how it works.

Types of Zone setups

A separated zone that **can be mowed** in a single operation


<100m² RC Models

<200m² RS Models

If possible, the separated area may be connected to the main area's Base station Perimeter Wire and no additional hardware is needed.

If a separated area is larger than 100m² For RC models or 200m² for RS models, then it requires more than a single operation to cover the area;


In such cases, an additional Base Station (optional accessory) should be installed in the Separated Zone

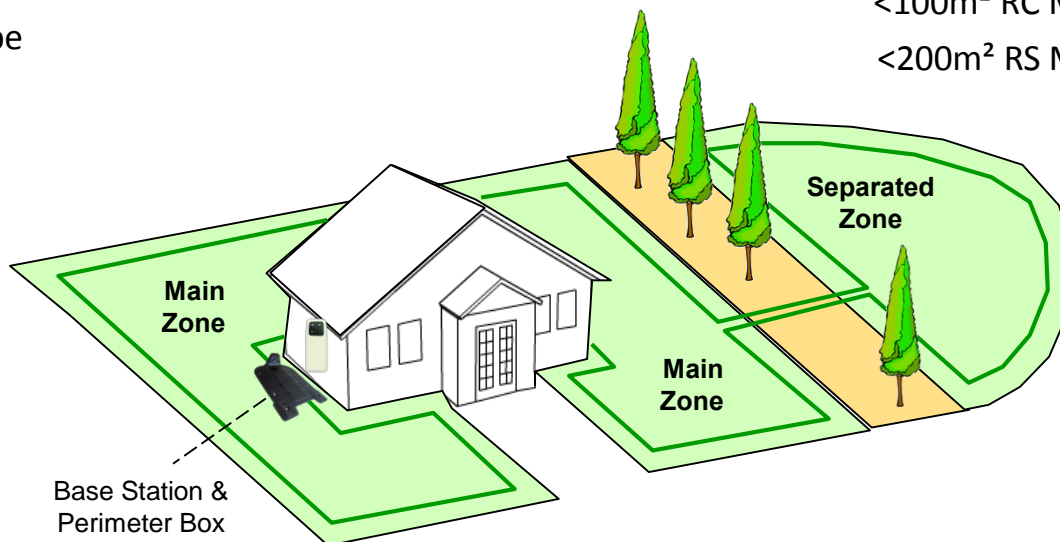

Or

It may have to have its own separate Perimeter Wire.


In that case, it will have to be connected to a Perimeter Switch (optional accessory).

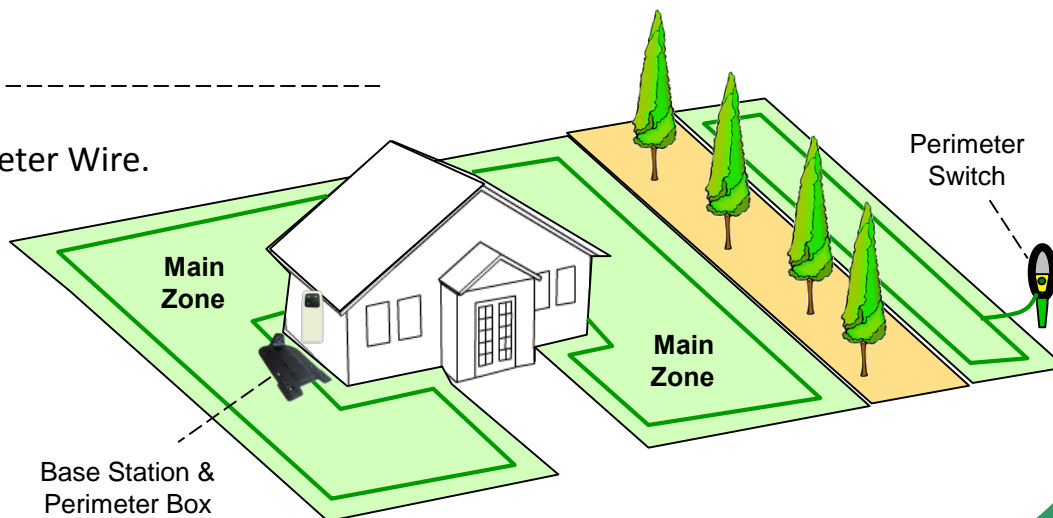

Types of Separated Zone setups (cont.)


A separated zone that **cannot be mowed** in a single operation

An additional Base Station (optional accessory) should be installed in the additional area. Otherwise, the user will have to carry the mower several times to mow the Separated Zone.

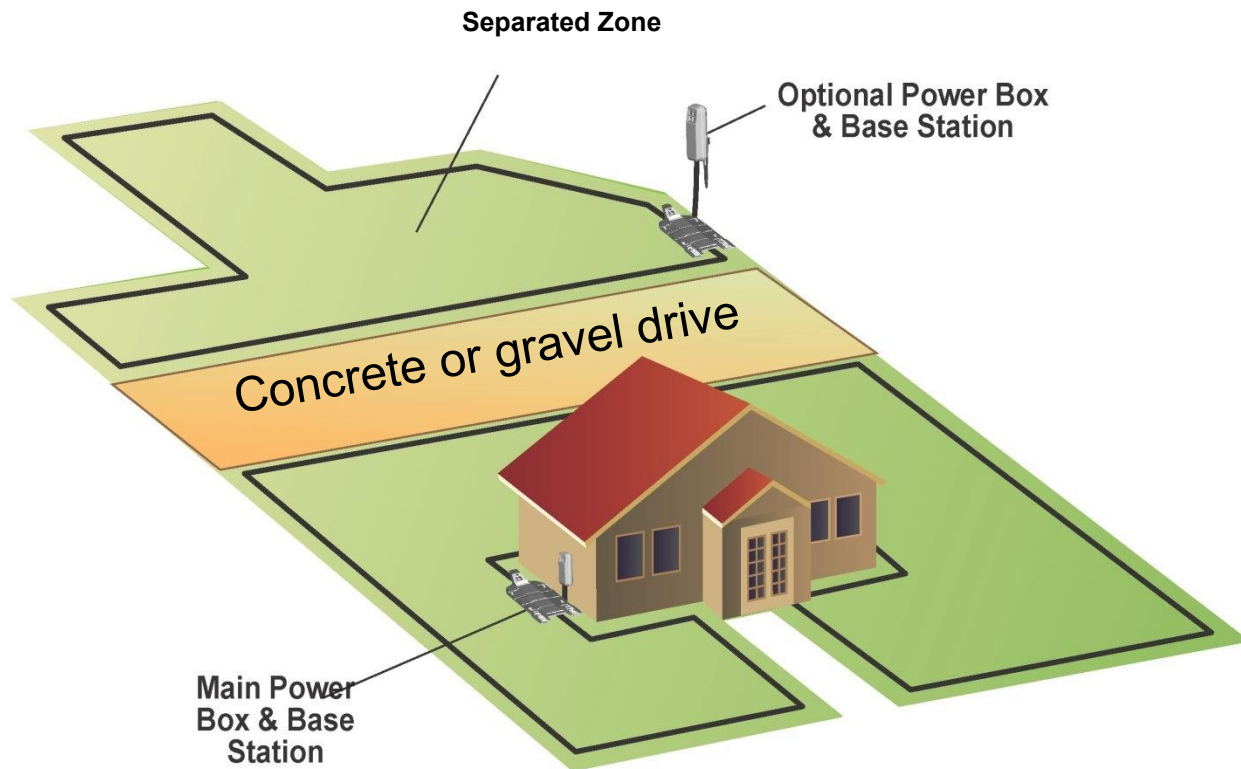

An additional Base Station would be required (Sold separately)

Example of multi Zones connected to Base

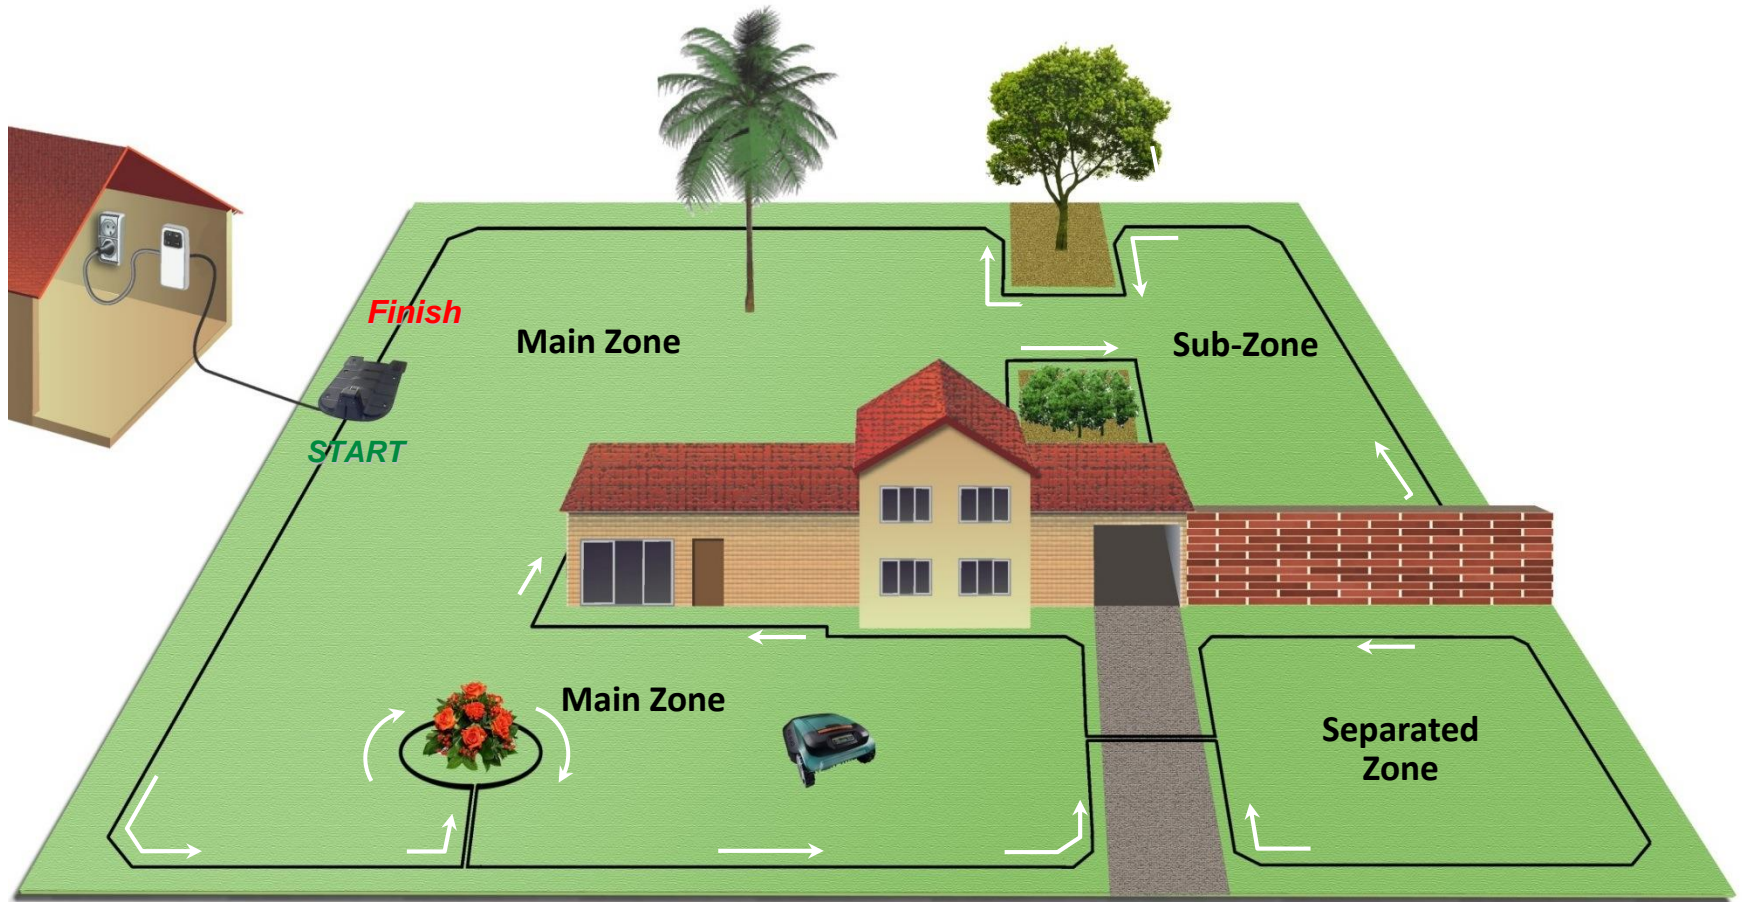

No additional perimeter switch is required in this layout.

What's in the Box



Robomow



DVD



 
Perimeter Wire



Wire Pegs



Operating & Safety Manual




Wire Connectors



Plot Connectors



 RoboRuler

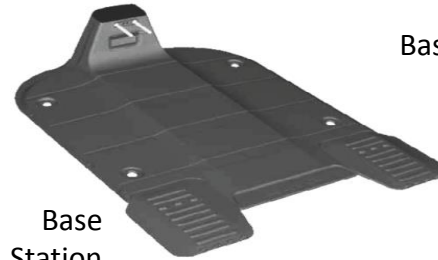

Base Station

Base Station Stakes



 
Power Box



Extension Cable





Power Box Mount

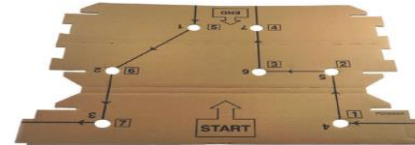

Template for Narrow Passage

Line	Part No.	Model	Lawn Size (m ²)	Pegs / Wire	Battery	P.Box	Power Supply
Premium	PRD6100A	RS612	1200	350 pegs 250m wire	BAT6001B	MSB7010A	PWS0016A
	PRD6200A	RS622	2200	450 pegs 350m wire	BAT6001B	MSB7010A	PWS0016A
	PRD6300A	RS630	3000	500 pegs 400m wire	BAT6000C	MSB6012A	PWS0018B

  What's in the Box

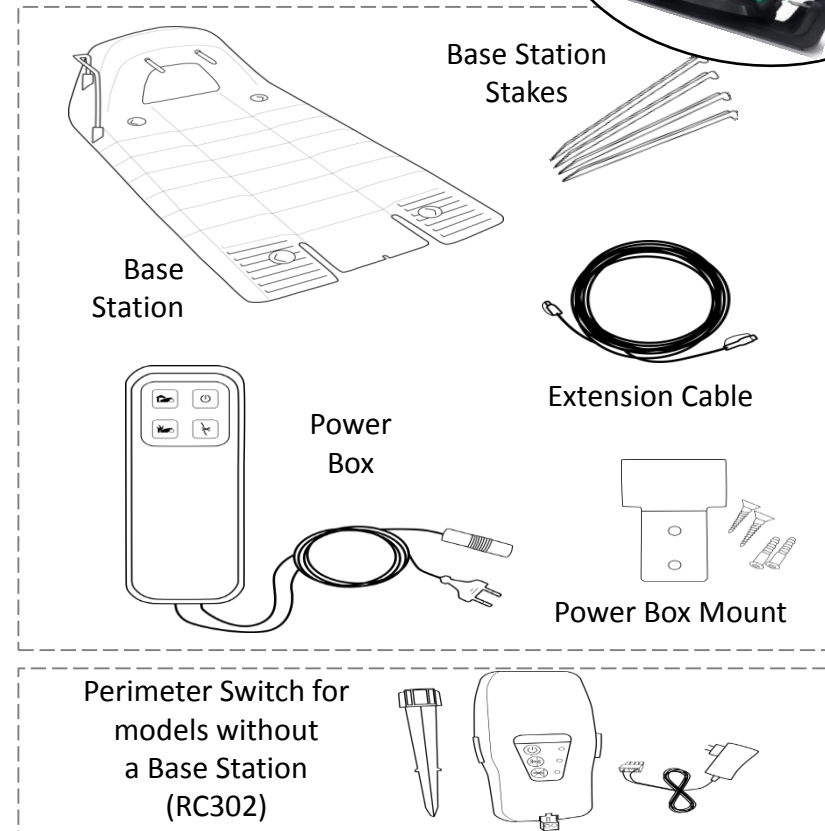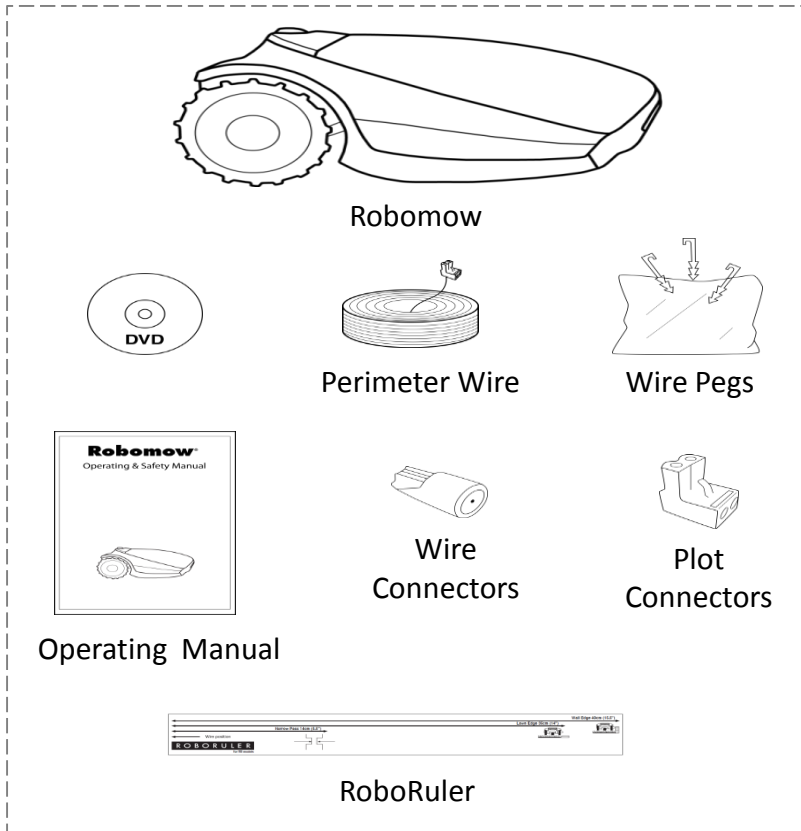

Line	Part No.	Model	Lawn Size (m ²)	Pegs / Wire	Battery	P.Box	Power Supply
Premium	PRD7002A	RC302	200	150 pegs 100m wire	BAT7000B	MSB7010A	PWS0016A
	PRD7004A	RC304	400	200 pegs 150m wire	BAT7000B	MSB7010A	PWS0016A
	PRD7006A	RC306	600	250 pegs 200m wire	BAT7000B	MSB7010A	PWS0016A



감사합니다 Natick
Grazie Danke Ευχαριστίες Dalu
Thank You Köszönöm
Спасибо Dank Gracias
谢谢 Merci Seé
ありがとう

Obrigado